CEILING MOUNTING: SOUNDWAVE CLOUD WITH THREADED INSERT AND SWIVEL CABLE LOCK

G&S ACOUSTICS
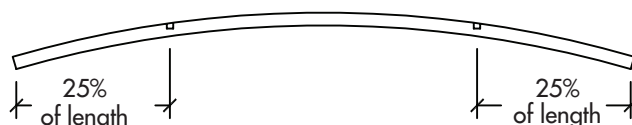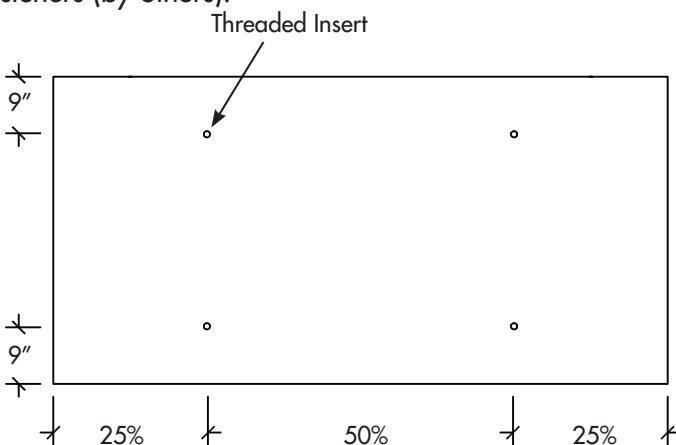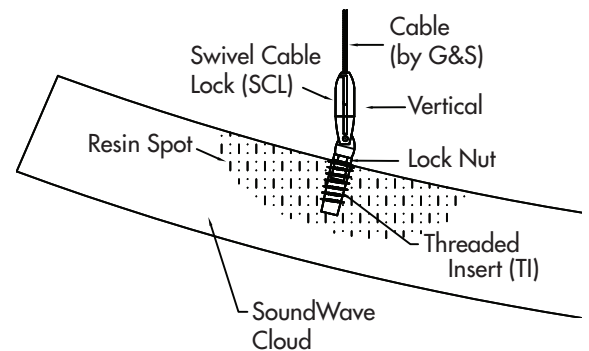Golterman & Sabo

APPLICATION

Mounting SoundWave Clouds to a ceiling using a threaded insert, swivel cable lock and cable

DESCRIPTION

This installation technique uses a threaded insert (TI) set in place by G&S on the back of the SoundWave Cloud. A swivel cable lock (SCL) is screwed into the threads (by others). DO NOT OVER TIGHTEN. Installation is as follows:

1. Screw the SCL into the TI.

2. Confirm the swivel is in the vertical position when tightened.

3. Insert blank cable into SCL. Confirm that is is locked.

4. Attach cable to ceiling structure above using appropriate fasteners (by others).

MOUNTING DETAIL

Cable (by G&S)
Swivel Cable Lock (SCL)
Vertical
Resin Spot
Lock Nut
Threaded Insert (TI)
SoundWave Cloud

Threaded Insert

9"
9"
25%   50%   25%

25% of length   25% of length

25% of length   25% of length

Optional

- 10' Aircraft Cable
  - Longer lengths available by request
- Threaded Swivel
  - TI takes a 1/4" 20 thread

  Provided by G&S
  four (4) per Cloud

Controlling Sound Beautifully