CEILING MOUNTING: ACCENT BAFFLES WITH THREADED INSERT AND SWIVEL CABLE LOCK



APPLICATION


Mounting Accent Baffles to a ceiling using a threaded insert, Swivel Cable Lock and cable.

DESCRIPTION


This installation technique uses a threaded insert (TI) set in place by G&S on the top of Accent Baffle. A Swivel Cable Lock (SCL) is screwed into the threads (by others). DO NOT OVER TIGHTEN. Installation is as follows:

- 1. Handle the Accent Baffle very carefully. If the Baffles are wrapped in packaging, leave them wrapped until they are installed.
- 2. Accent Baffles should be installed with a minimum of 2" between the baffles
- 3. Screw the SCL into the TI.
- 4. Confirm the swivel is in the vertical position when tightened.
- 5. Insert blank cable into SCL. Confirm that it is locked.
- 6. Attach cable to ceiling structure above using appropriate fasteners (by others).

THREADED INSERT LOCATIONS

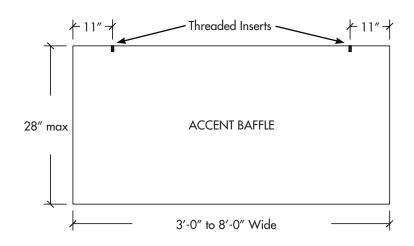

MOUNTING DETAIL

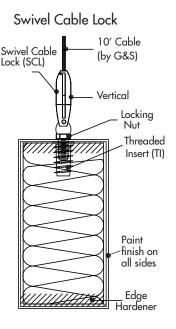

Optional

- Cable
 - Longer lengths available by request
- Threaded Swivel
 - TI takes a 1/4" 20 thread

Provided by G&S

Controlling Sound Beautifully

