

CEILING MOUNTING: CLEAR PUCK MOUNTED CEILING PANELS

APPLICATION

For installing ceiling-mounted fiberglass acoustical panels using clear pucks.



DESCRIPTION

Use clear pucks and fasteners (by others) to install fiberglass acoustical panels to ceilings. Installation is as follows:

1. Lay out panels and establish each panel location with a tape measure and a snap-line. Once each panel location is established, you may begin to install panels.
2. Locate the pucks per the attached location guide for each panel.
3. Install anchors as necessary to engage the fasteners and hold the panel. Each anchor point should hold a minimum of 100 lb tensile strength per anchor.
4. Cut a small "X" in the fabric at the point where the screw will penetrate the panel. Do this at each puck location.
5. Lift the panel, face down, and into position against the ceiling.
Do not leave the panel unsupported.
6. Insert appropriate fastener into the center of each puck.
Fasteners are not provided by G&S Acoustics.
7. Tighten fastener through the puck until it is snug. **Do not over-tighten.**
8. Continue until all the panels are installed.




Note: Due to variations in fiberglass thickness, some shimming may be required to align the panel edges.

PUCK MOUNTED CEILING PANELS

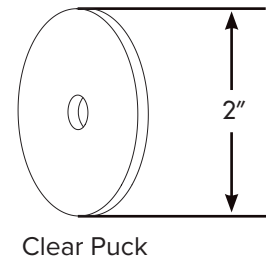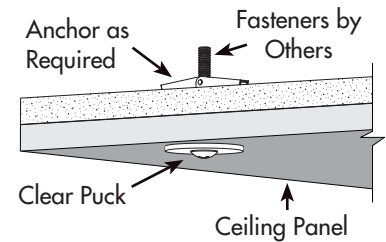

Controlling Sound Beautifully

STANDARD LOCATIONS FOR PUCK MOUNTING - CEILING PANELS

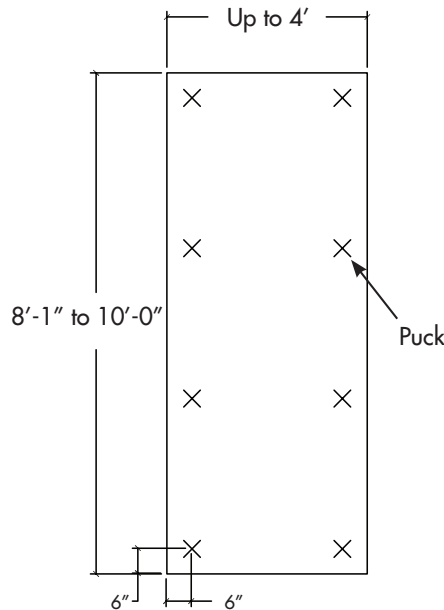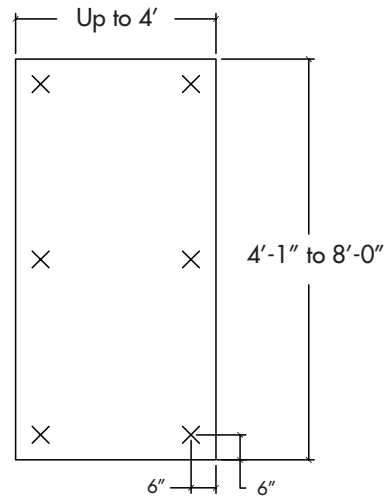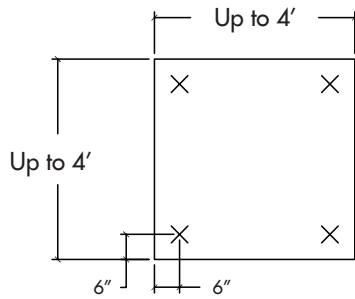

Controlling Sound Beautifully

800-737-0307 • 636-225-8800 • fax 636-225-2966 • www.gsacoustics.com

