

CEILING MOUNTING: Seamless Bottom Baffle with Eyebolt Mounting

APPLICATION:


For ceiling mounting Seamless Bottom Baffles with Eyebolt Mounting.

DESCRIPTION:


This installation uses a threaded eye bolt fastened to a factory installed threaded insert (TI). Installation is as follows:

1. Handle the Seamless Bottom Baffle very carefully.
2. Each eyebolt should have two locking nuts as shown in the Mounting Detail. Make sure the locking nuts are screwed tightly to the base of the eyebolt at the upper end of the threads.
3. Screw the eyebolts into the threaded inserts until the locking nuts are snug against the threaded insert - stop tightening - DO NOT OVERTIGHTEN. There is no need to tighten the eyebolts beyond snug.
4. Seamless Bottom Baffles should be installed with a minimum of 2" between the baffles.

Mounting Detail

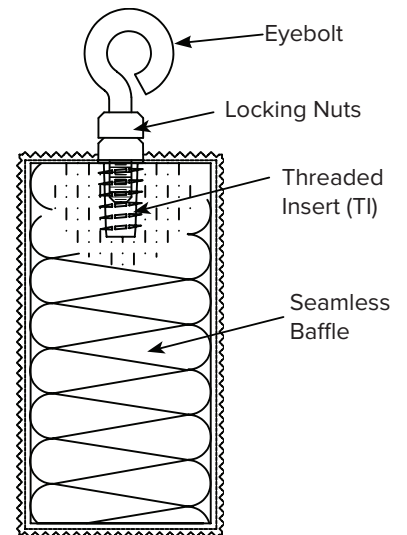

Eyebolt

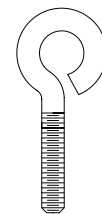

1/4" 20 Eyebolt

Locking Nut



Threaded Insert Locations

