

# CEILING MOUNTING:

## Snap-On Rotofast, 1" and 2" APC Panels



### APPLICATION:


For mounting 1"-2" APC fabric covered fiberglass acoustical panels to ceilings in "applique" installations only. **Do not use with painted acoustical panels, for APC1 and APC2 panels only.**

### DESCRIPTION:


This installation technique uses a Snap-On Rotofast with ratchet. The ratchet is designed to fit tightly inside the Rotofast for a snug, secure fit. The panel will fit tightly to the mounting surface. Installation is as follows:

1. Locate the mounting location on the back of the panel. Rotofasts should be mounted 6" from the edge, see page 2 for Rotofast locations.
2. Screw Rotofast Snap-On Anchors into the back of the panel using the Rotofast Driver Tool, **by hand only. Do not overtighten.**
3. Insert Marking Plugs into the Snap-On Anchors.
4. Push the panels against the ceiling to mark anchor locations.
5. Screw Ratchets to ceilings at marked locations (#8 screw recommended).
6. Firmly push panels onto Ratchets to complete installation.

### Elevation

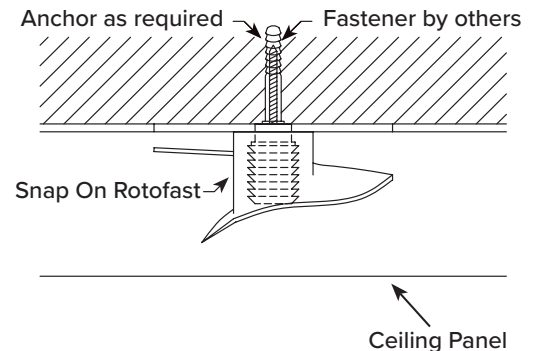


### Snap On Rotofast

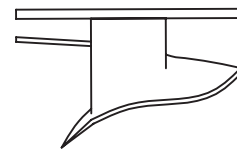


### Ratchet



### Marking Plug



### Rotofast Driver Tool

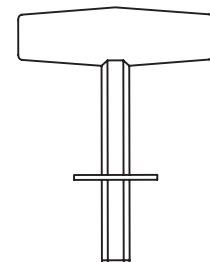

# Standard Locations for Rotofast Mounting - Ceiling Panels

