

# WALL MOUNTING: Snap-On Rotofast, 1" and 2" Panels





## APPLICATION:

For mounting 1"-2" fabric covered fiberglass acoustical panels to walls in "applique" installations only. **Do not use with painted acoustical panels.**

## DESCRIPTION:

This installation technique uses a Snap-On Rotofast with ratchet. The ratchet is designed to fit tightly inside the Rotofast for a snug, secure fit. The panel will fit tightly to the mounting surface. Installation is as follows:

1. Locate the mounting location on the back of the panel. Rotofasts should be mounted 6" from the edge, see page 2 for Rotofast locations.
2. Screw Rotofast Snap-On Anchors into the back of the panel using the Rotofast Driver Tool, **by hand only. Do not overtighten.**
3. Insert Marking Plugs into the Snap-On Anchors.
4. Push the panels against the walls to mark anchor locations.
5. Screw Ratchets to walls at marked locations (#8 screw recommended).
6. Firmly push panels onto Ratchets to complete installation.

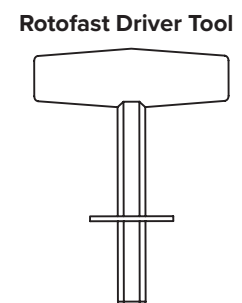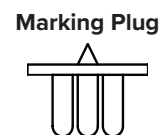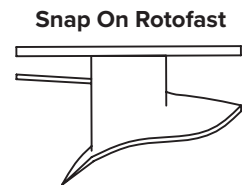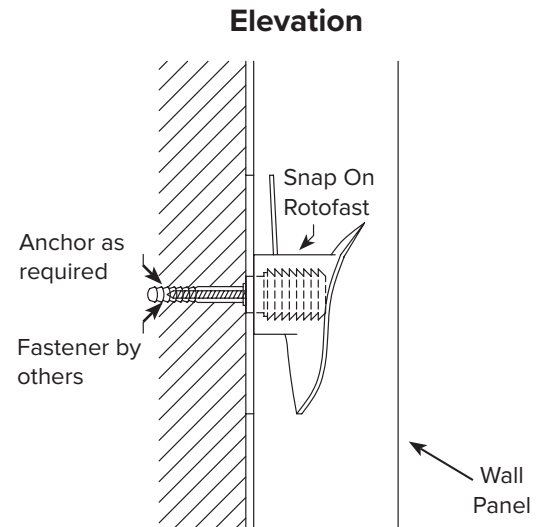

# Standard Locations for Rotofast Mounting - Wall Panels

