

aCapella TempoFins Panels

Direct Mount - Wall Installation


APPLICATION:

For mounting aCapella TempoFins to walls using Grip5 channels.


TOOLS NEEDED:

Drill, 5/16" Spade Drill Bit, (2) Phillips Screwdrivers, Fasteners (by others)

MOUNTING HARDWARE:

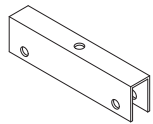

Grip5




Threaded Through Bolt (TTB)


INSTALLATION INSTRUCTIONS:

1. Each TempoFins panel requires two (2) Grip5s. Measure 10" down from the top corner and mark the TempoFins panel.
2. Align top edge of the Grip5 on the 10" mark, then push the Grip5 on the TempoFins panel. Locate the holes on the side of the Grip5 and mark the TempoFins panel through the holes.
3. Remove the Grip5 and drill two (2) 5/16" holes.
4. Measure 10" up from the bottom corner and mark. Align bottom edge of the Grip5 on the 10" mark, then push the Grip5 on the TempoFins panel. Locate the holes on the side of the Grip5 and mark the TempoFins panel through the holes.
5. Remove the Grip5 and drill two (2) 5/16" holes.
6. Measure and mark Grip5s a minimum of 3" apart on wall. Install Grip5s using one (1) fastener (by others) per Grip5. Grip5s should be installed in line to allow installing of TempoFins panels.


Step 1

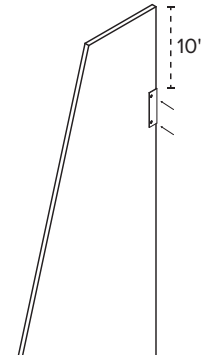


Step 2

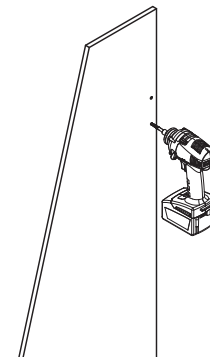

Step 3

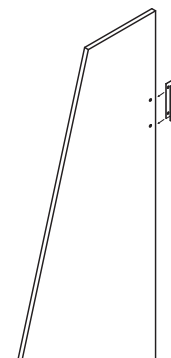

Step 4

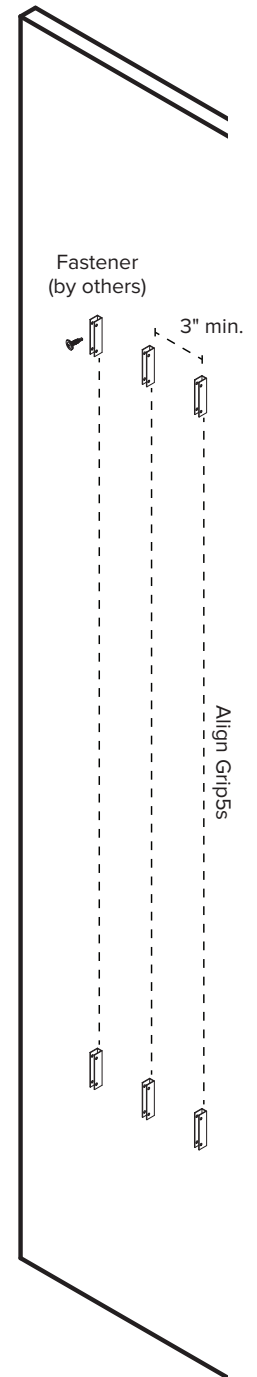

aCapella TempoFins

Direct Mount - Wall Installation

INSTALLATION INSTRUCTIONS:

- Place TempoFins panels in the Grip5s and attach using the Threaded Through Bolts. **Ensure all TempoFins panels' fronts are facing the same direction.** Hand tighten with Phillips screwdrivers. Repeat for all.

Use appropriate fasteners and hardware to install the panels from the structure. Remove all stickers before hanging.

HANDLING AND STORAGE

aCapella panels must be stored indoors in a dry, climate controlled environment at all times. Exposure to moisture, excessive heat or humidity can cause panels to warp and/or stain.

Panels should be stored in a flat, fully supported, horizontal position and NOT on edge. It is recommended that 2 people carry each panel. Panel should be carried on edge, being careful not to bend panel at any time. Clean white gloves are also recommended when handling aCapella panels.

Step 5

